



LE1169_Porta Potti 145-165_0514-V01

	Spare part number	Spare part number	Spare part number	Colours available
1	Cover		07331	68
2	Seat			
3	Waterfill cap	12901		79
4	Flush-water tank <i>excl. seat & cover</i>		07471	68
5	Bellow	07862		62
6	Inlet tube		07024	
7	Check valve body			
8	Check valve flapper			
9	Flush tube		07031	62, 79
10	Spring seal plunger			
11	O-ring			
12	Nozzle			
13	Clasp handle			
14	Clasp spacer			
15	Screw			
16	Pour out spout	07492		62
17	O-ring		16195	
18	Capseal			
19	Dump cap		07493	62
20	Vent seal	07102		
21	Vent button		07524	62, 79
22	Spring			
23	Seal retainer			
24	Waste-holding tank		07475 <i>PP145</i>	44
			07476 <i>PP165</i>	68
25	Valve handle			
26	Boot seal			
27	Blade			
28	Retainer			
29	Lipseal	07101		
30	Clip retainer			
31	Clasp spacer			
32	Screw			

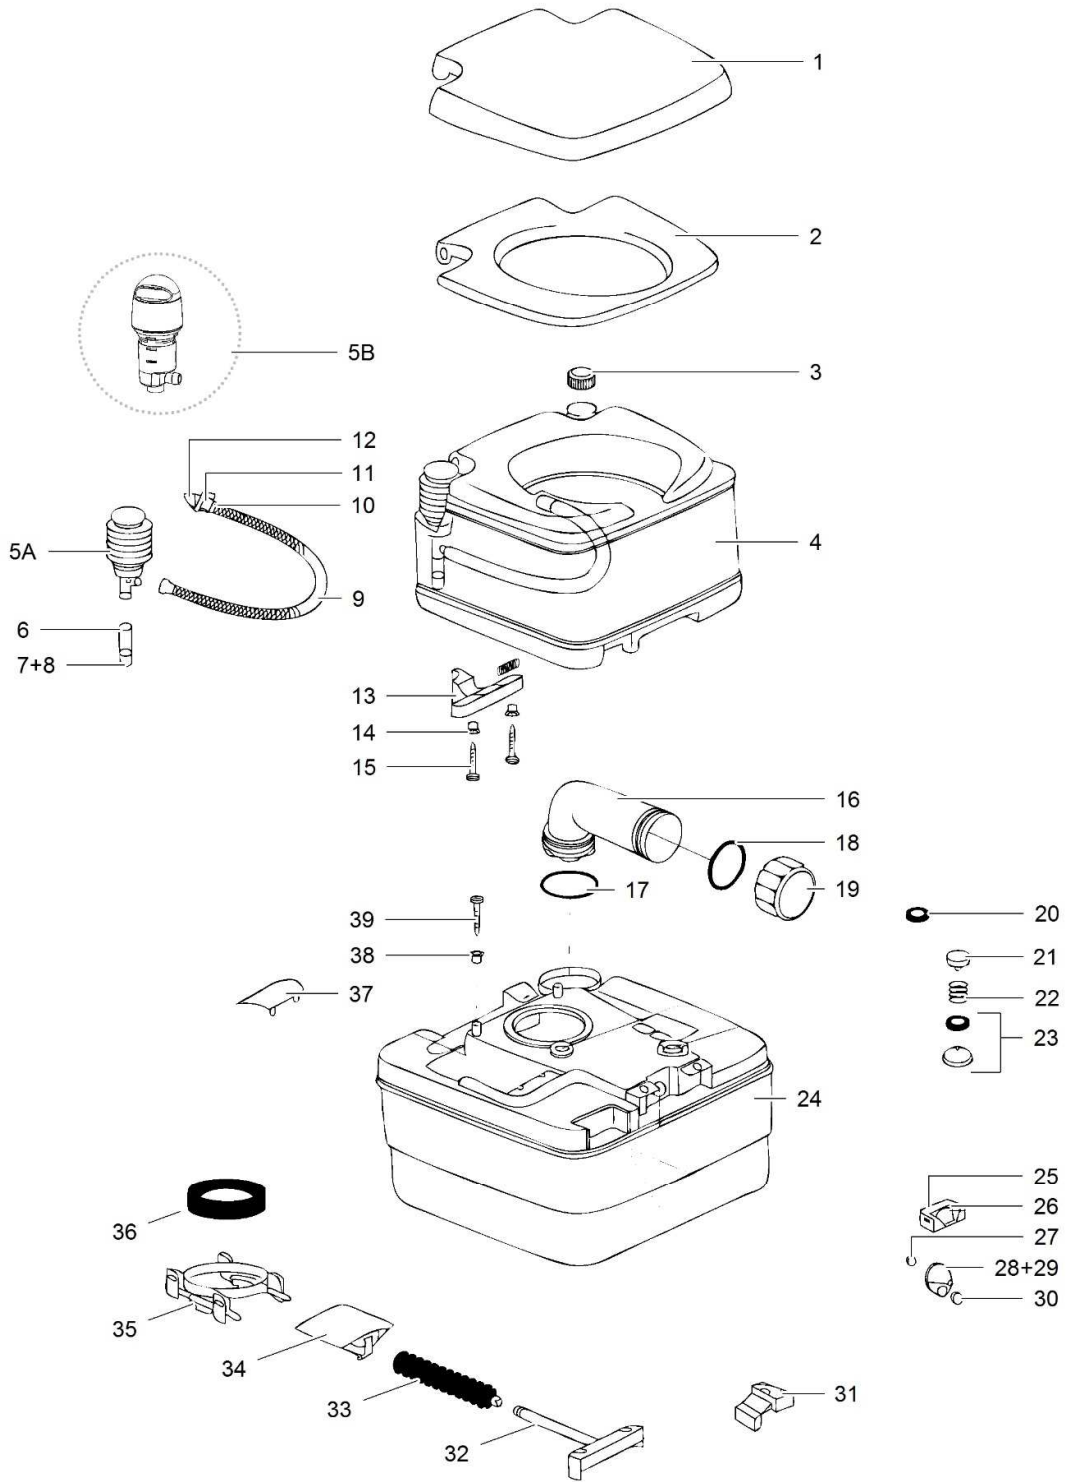

LE1171_Porta Potti 335-345-365_0514-V01

		Spare part number	Spare part number	Spare part number	Colours available
1	Cover				
2	Seat				
3	Waterfill cap	12901			79
4	Flush-water tank				
5A	Bellow	07862			62
		25817			79
5B	Piston pump > Aug 2005	PP335	25818 PP345-365		44, 68, 79
6	Inlet tube		07016 PP335		
7	Check valve body			07024 PP345-365	
8	Check valve flapper				
9	Flush tube				
10	Spring-seal plunger			07031	62, 79
11	O-ring				
12	Nozzle				
13	Clasp handle				
14	Clasp spacer				
15	Screw				
16	Pour out spout		07492		69, 88
17	O-ring				
18	Capseal	16195			
19	Dump cap			07493	62
20	Vent seal	07102			
21	Vent button				
22	Spring		07524		62, 79
23	Seal retainer				
24	Waste-holding tank				
25	Bezel				
26	Lens				
27	Weight				
28	Decal level indicator				
29	Dial				
30	Magnet				
31	Float arm	21322			
32	Valve handle				
33	Boot seal				
34	Blade				
35	Retainer				
36	Lipseal	07101			
37	Clip retainer				
38	Clasp spacer				
39	Screw				

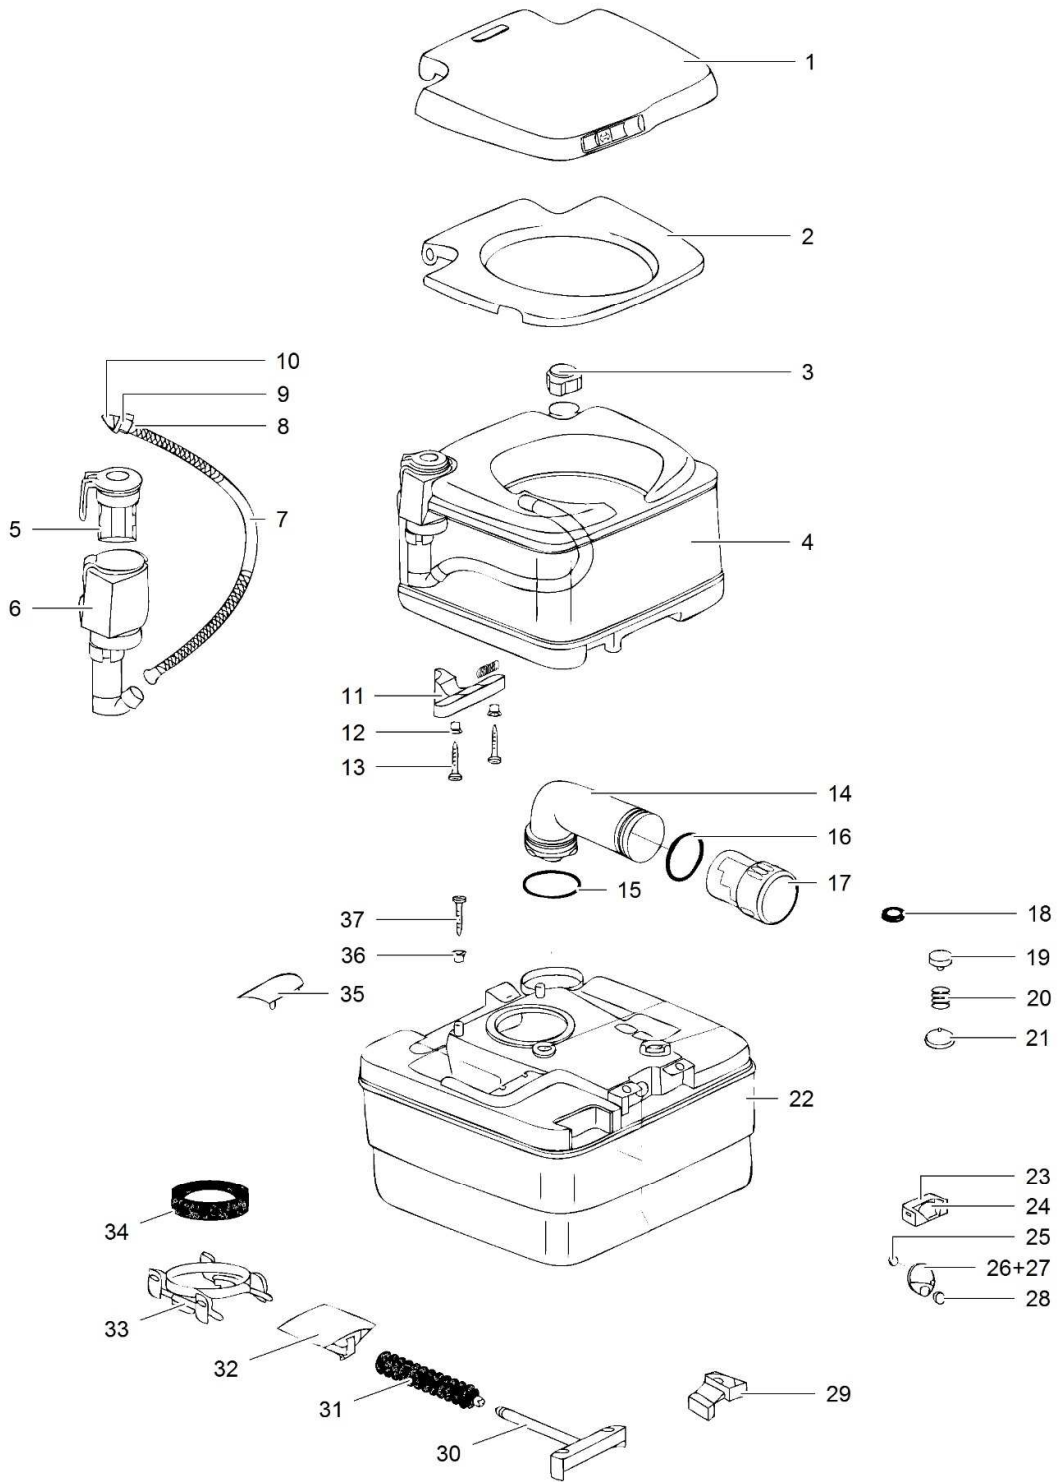

LE1172_Porta Potti-465_1014-V02

	Spare part number	Spare part number	Spare part number	Colours available
1	Cover			
2	Seat			
3	Waterfill cap	25804		79, 89
4	Flush-water tank			
5	Button housing	25806		79, 89
6	Pump housing	25807		79, 89
7	Flush tube			
8	Spring-seal plunger-pin		25808	79, 89
9	O-ring			
10	Nozzle			
11	Clasp handle			
12	Clasp spacer			
13	Screw			
14	Pour out spout		25809	88, 90
15	O-ring	16195		
16	Capseal			
17	Dump cap		25810	79, 89
18	Vent seal	07102		
19	Vent button			
20	Spring		07524	79, 89
21	Seal retainer			
22	Waste-holding tank		25811	79,89
23	Bezel			
24	Lens			
25	Weight			
26	Decal level indicator			
27	Dial			
28	Magnet			
29	Float arm	21322		
30	Valve handle			
31	Boot seal			
32	Blade			
33	Retainer			
34	Lipseal	07101		
35	Clip retainer			
36	Clasp spacer			
37	Screw			